

Disable Patrol Read

How to check if its running

Check here:



How to disable

1. Open MegaRAID Storage Manager
2. Log into your Server
3. In the Dashboard, click on "Physical"



4. Right click on your Controller and select "Set Patrol Read Properties"



5. Configure the Patrol Read Properties here



Revision #2

Created 29 June 2025 21:22:37 by Oliver Karger

Updated 29 June 2025 21:23:12 by Oliver Karger