

# Linkvil W-Series

## 1. Go to *Line - SIP*

Setting	Value
Username	Extension
Display Name	Display Name of the Extension
Authentication User	Registration Name
Authentication Password	Registration Password
Server Name	Display Name of the Extension

Revision #1

Created 28 July 2025 10:00:45 by Oliver Karger

Updated 9 November 2025 14:30:18 by Oliver Karger